


SUBJECT: **FAZE<sup>180</sup>** "FXCA"  
Replacement Instructions

**mcPhilben**<sup>®</sup>  
emergency lighting  
**INSTRUCTION SHEET**

**WARNING:** **ELECTRICAL SHOCK POTENTIAL!!** DO NOT ATTEMPT TO INSTALL, MAINTAIN OR RELAMP WITHOUT DISCONNECTING ALL POWER. FAILURE TO DISCONNECT POWER CAN RESULT IN ELECTROCUTION, SHOCK OR SEVERE BURNS.

**CAUTION:** This fixture is designed for permanent installation in ordinary (Non-Hazardous) locations in accordance with the National Electrical Code and all applicable local codes. Do not use in areas of limited ventilation or in high ambient enclosures. The lamp and fixture operate at high temperatures. Contact with combustible materials can cause fire and personal contact can cause severe burns.

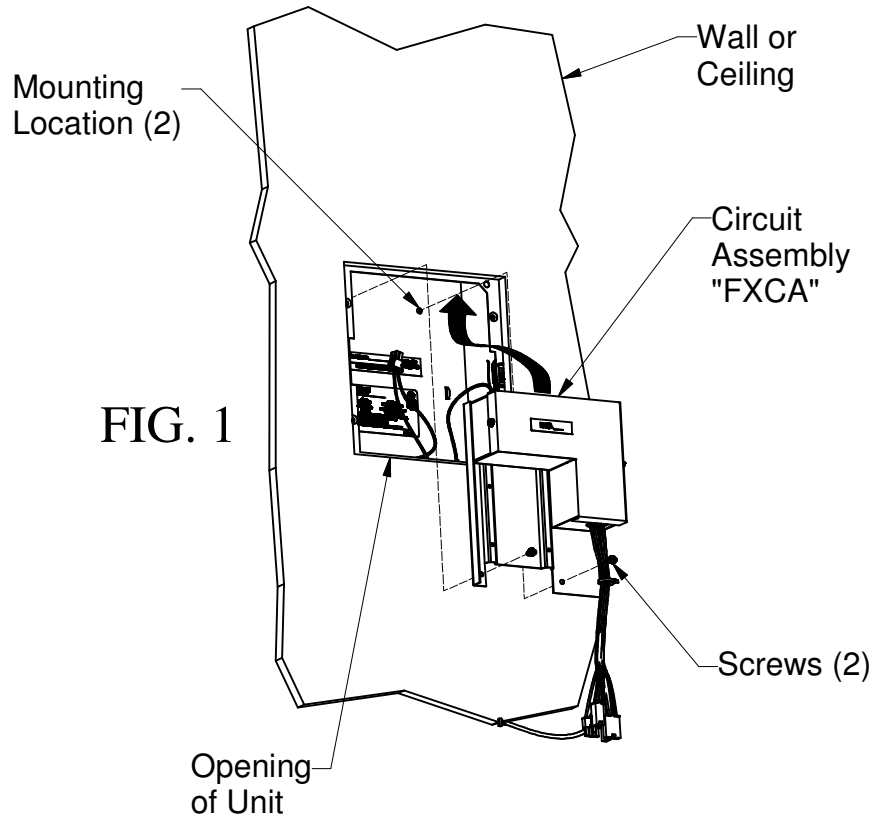

- 1.) Remove Trim/Lamp Unit from Wall or Ceiling. Refer to the "FXTL" Installation Instructions.
- 2.) Disconnect battery connector to battery tray.
- 3.) Remove two screws, shown in Fig. 1, to free the Circuit Assembly from Emergency unit.
- 4.) Pull Circuit Assembly out through Opening of Unit.
- 5.) Disconnect power leads from the Circuit Assembly
- 6.) Cut ground from Circuit Assembly. Strip ground connected in backbox.
- 7.) To install new Circuit Assembly, connect stripped ground lead to ground lead from Circuit Assembly.
- 8.) Connect Circuit Assembly power lead.
- 9.) Cap unused voltage leads.
- 10.) Install Circuit Assembly, as shown in Fig 1.
- 11.) Reinstall two screws to secure Circuit Assembly
- 12.) Reconnect battery connector.
- 13.) Reinstall Trim/Lamp Unit. Refer to "FXTL" Instruction Sheet.

11/8/2006

7-87625-987